Edgecam Designer System Licenses		Edgecam Designer Essential ECSYS-ESS	Edgecam Designer Standard ECSYS-STD	Edgecam Designer Advanced ECSYS-ADV
File	handling			
	Create data file	•	•	•
	Open / Insert	•	•	•
	Copy / Paste / Delete	•	•	•
	Save / Save as / Save part as			
Edi	-			
Lui				
	Undo / Redo / Undo history	•		
	Translate / Rotate / Mirror / Scale / Stretch	•	•	•
	Edit Elements (Wireframe)	•	•	•
	Workplanes: Create / Transform	•	•	•
	Project: Projected area / On wpl / Points	•	•	•
	Project: Elements			
Wii	reframe - Create and Edit			
- 441	Points / Lines / Circles / Rectangles / Slot / Polygon / Ellipse			
-	Chamfer / Fillet			
-				
	Curves: Create / Join	•	•	•
	Dissolve	•	•	•
	New: 2D Offset	•	•	•
	Profiles: Create / Offset / Fillets	•	•	•
-	Trim / Trim elements / Extend direct / Extend by length			
	Points on elements			
-				
	Pointsets: Linear / Rectangular / Circle centres / Matrix / Add a point / Delete a point			
-	Extract Edges		•	•
	Wrap		•	•
	Blend with curve		•	•
Sol	id and simple surface			
	Send to CAM	•	•	•
	Scaling			
-	Edit Properties			
-		-	-	
-	Primitive forms (Cuboid / Cone etc.)		•	•
	Surfaces: Linear ruled / Piped / Planar		•	•
	Surfaces: Auto-constrained / Extend / Tangent / Join			•
L	Surfaces: By 1 drive / Draft / Draft from face			•
	Surfaces: Trim / Edit trim / Trim face-face / Delete edges			•
CA	D Operations			
	Boolean: Unite / Cavity / Intersect			
	Extrude / Revolve / Move faces			
-			•	•
-	Cut bodies / Section / Pocket boss			
	Offset/Hollow/Thicken		•	•
	Drilled and tapped hole forms		•	•
	Fill holes / Remove face / Replace		•	•
L	Blends / Chamfer / Blend Faces / Draft		•	•
	Simplify / Edit cylind. Face		•	
	Dissolve body / Close to solid			
	Pattern feature: Rotate / Translate / Mirror			
۸۵۰	alysis			
ATT				
	Validate bodies / Surface analysis	•	•	•
	Distance / Angle / Bounding box / Weight	•	•	•
L_	New: Geometric properties	•	•	•
	Status / Layer status / Calculator	•	•	•
Anı	notation			
	Text / Edit text / Text leader / Balloons			
-	Simple dimensions: Arc / Element / Angle / Point			
	Masks: Load/ Create / Update	•	•	•
	Image plane	•	•	•
	Assign telegrapes to helps and shofts	I		
	Assign tolerances to holes and shafts			

Edgecam Designer 2018 R2 Feature Chart

Edgecam Designer Modules	CATIA V4 Import ECCAD-001	CATIA V5 Import ECCAD-002	NX Import ECCAD-004	ProE/Creo Import ECCAD-005	2D Drawing ECCAD-007
Import / Export					
CATIA V4 Import	•				
CATIA V5 Import		•			
NX Import			•		
Pro E/Creo Import				•	
Additional functionality					
2D Drawing					•

Notes
All Edgecam Designer System licenses are prerequisites for the 2D Drawing module

Third party CAD formats included in all system licences
ACIS (*.sat; *.asat)
DXF (*.dxf)
DWG (*.dwg)
IGES (*igs; *.iges; *ige)
Inventor (*.ipt; *.iam)
Parasolid (*.x_b; *.x_t; *.xmt_bin; *.xmt_txt)
Solid Edge (*.asm; *.par; *.psm; *.pwd)
SolidWorks (*.sldprt; *.sldasm)
STEP (*.stp; *.step)
STL (*.stl)
VDA (*.vda)
PLY (*.ply)